


# “A” Series Recirculation Timer Setting:


## 1. Check the current time

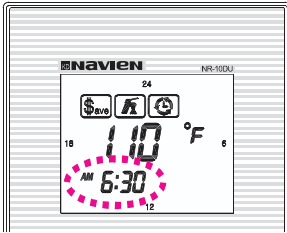


Before setting the Recirculation timer, ensure the remote controller is set to the current time. If the clock is not set to the current time, please adjust the clock (refer to 74 page).

Next, determine when recirculation is needed and for how long an interval.

## 2. Press the Function Button.

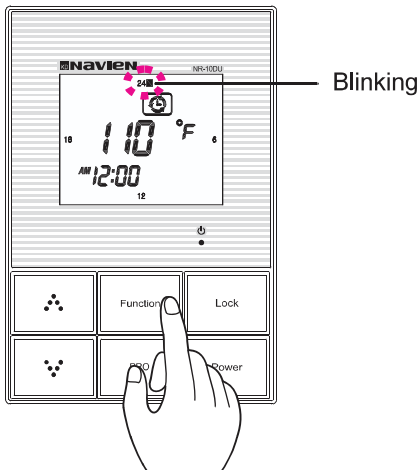


When the “Function” button is pressed,

‘’ appears and ‘■’ flashes.

The circulation timer blinks.


## 3. Press the ⬆️ (UP) or ⬇️ (DOWN) Key:

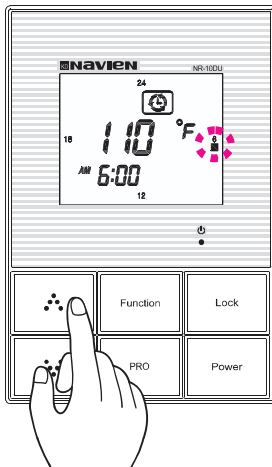

Press the ⬆️ (Up) or ⬇️ (Down) Key to adjust the cursor ‘■’ around the 24 hour clock in 30 minute increments. The 24 hour clock is displayed around the perimeter of the remote controller display screen.


Each solid black block indicates one 30 minute Recirculation period

#### 4. Press the Function Button and Set the Circulation Timer.

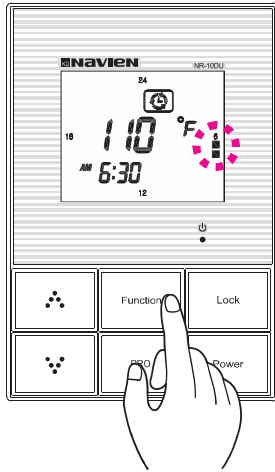


When you press the function button at a desired recirculation start time, a '■' mark will appear meaning, that you are setting that time period for a circulation. After the black box mark appears, it will automatically go to the next time period, asking you if you want a circulation at that time, and so forth. You can manually press "⋮" or "⋮" to scroll to the time period that you want altered.

Tip : If you have made an error, or want to change the settings, use the "⋮" or "⋮" button to scroll through the time periods and press the function button. Then the '■' will disappear meaning that you don't want circulation happening at that period.

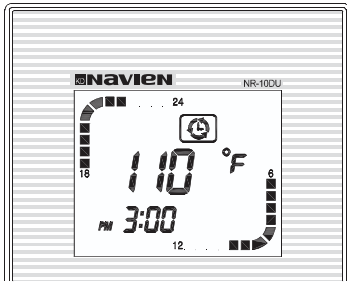

For example, recirculation could be set to run from 6AM to 9AM and from 6PM to 9PM daily-see screen sample on the left side.

#### Deactivate Circulator timer and periods

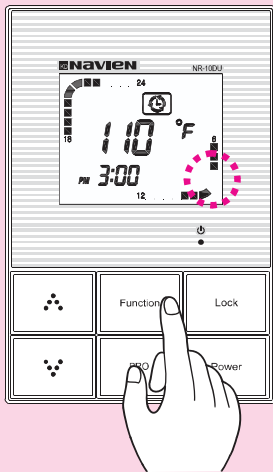

Move indicator '■' to a blacked block period and press the "FUNCTION" key to deactivate the recirculation pump for the current period. Repeat this action to clear multiple periods.